



## Phoenix Rackmount Faceplate Assembly Instructions

Assembling the rackmount faceplate that comes with your Phoenix Movie Player couldn't be easier.

1. Open the white cylindrical package that came with your Phoenix system.
2. Remove the faceplate from the cylinder and carefully remove the packaging so as not to scratch the anodized aluminum surface.
3. Remove the 5/64<sup>th</sup> hex key and the rack mount bolts that are taped to the packaging inside the cylinder. In some cases, the hex key may be inside the Phoenix parts box.
4. Set up the components that are to be attached to the front plate. These cases were shipped without the individual front plates attached but with the mounting screws in place.
5. Remove the four faceplate mounting screws from each component.
6. Line up the faceplate to the mounting holes on the component and thread the mounting screws into the same holes in the component from which they were removed.
7. Make the screws finger tight until all screws are in place.
8. Tighten the screws using the hex key provided.



Rack mounting the components:

9. Carefully move the mounted components into the rack giving the Phoenix case support with your hand or on a lower component in the rack
10. Thread the rackmount bolts that were provided into the rack holes on each side. The components will want to push the bottom of the rack plate out so tighten these bolts first using a #2 Phillips screwdriver.
11. Avoid putting any pressure on the back of the components after rackmount installation.

